


# TRANZ 330

## Reference Manual

---

VeriFone Part Number 00483 - Revision D  
Manual Revision 3.01

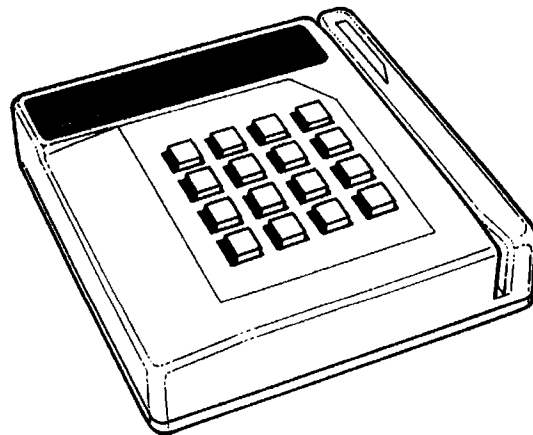

## **TRANZ 330 Reference Manual**

VeriFone Part Number 00483, Revision D  
Manual Revision Number 3.01

Published: April 1990

VeriFone™, Inc.  
Technical Publications Group  
100 Kahelu Avenue  
Mililani, Hawaii  
(808) 637-2911  
Telex: 5106007959 VERIFONE

Printed in the United States of America

Copyright© 1990 VeriFone, Inc. All rights reserved.

No part of this publication may be copied, distributed, stored in a retrieval system, translated into any human or computer language, transmitted, in any form or by any means, without the prior written consent of VeriFone, Inc. VeriFone™ and TRANZ 330™ are trademarks of VeriFone, Inc.

IBM®, IBM PC® and IBM AT® are registered trademarks of International Business Machines.

# Table of Contents

---

## 1. Introduction

|                                  |     |
|----------------------------------|-----|
| Display Panel .....              | 1-2 |
| Keypad .....                     | 1-2 |
| Cardreader .....                 | 1-2 |
| Telephone Jacks .....            | 1-3 |
| Serial Port.....                 | 1-3 |
| PIN Pad/Bar Code Wand Port ..... | 1-3 |
| Power Pack .....                 | 1-3 |
| Cable Routing Channels .....     | 1-3 |
| Optional Printers.....           | 1-3 |
| Slip Printer .....               | 1-3 |
| Roll Printers .....              | 1-4 |
| Printer 500 .....                | 1-4 |
| Optional Telephone.....          | 1-4 |
| Internal Modem .....             | 1-4 |
| Optional Bar Code Wand.....      | 1-4 |
| Optional PIN Pads .....          | 1-5 |

## 2. Installation

|  |     |
|--|-----|
| Selecting a Location for your Terminal .....         | 2-1 |
| Unpacking.....                                       | 2-1 |
| Telephone Line Connection .....                      | 2-2 |
| Connecting a Standard Telephone (optional).....      | 2-2 |
| Connecting the Printer 150 (optional) .....          | 2-2 |
| Connecting the Printer 250 (optional) .....          | 2-3 |
| Connecting the Printer 500 (optional) .....          | 2-4 |
| Connecting the Printer 600 (optional) .....          | 2-5 |
| Connecting the Bar Code Wand (optional) .....        | 2-5 |
| Connecting the PIN Pad 201 (optional) .....          | 2-6 |
| Connecting the PIN Pad 101 (optional) .....          | 2-6 |
| Connecting the Terminal Power Pack .....             | 2-7 |
| Routing Cords in the Cable Channels (optional) ..... | 2-7 |

# Table of Contents

---

## 3. Downloading

|   |     |
|---|-----|
| TRANZ 330 Downloading .....                       | 3-1 |
| Terminal-to-Terminal Direct Download .....        | 3-1 |
| Master/Slave Considerations .....                 | 3-2 |
| On the master terminal: .....                     | 3-2 |
| On the slave terminal: .....                      | 3-3 |
| On both terminals: .....                          | 3-4 |
| Direct PC Downloads .....                         | 3-4 |
| Telephone Download .....                          | 3-5 |
| Download Prompts for Empty Memory Locations ..... | 3-5 |
| Telephone Download Procedure .....                | 3-6 |
| BuyPass Download .....                            | 3-7 |

## 4. How the TRANZ 330 Works

|  |     |
|--|-----|
| Host Transactions .....                | 4-1 |
| Local Functions .....                  | 4-2 |
| Applications .....                     | 4-2 |
| Standard Application .....             | 4-2 |
| Custom Applications .....              | 4-2 |
| Programming a Custom Application ..... | 4-3 |
| Programming with the Keypad .....      | 4-3 |
| RAM and ROM Memory .....               | 4-3 |
| Memory Locations .....                 | 4-3 |
| Terminal Parameters .....              | 4-4 |
| Transaction Parameters .....           | 4-4 |
| Multiple Transactions .....            | 4-5 |
| Networks .....                         | 4-5 |

# Table of Contents

---

## 5. Basic Operation

|  |      |
|--|------|
| Startup .....                                    | 5-1  |
| Host Transaction Keys .....                      | 5-1  |
| Using the Cardreader .....                       | 5-1  |
| Using the Optional Bar Code Wand .....           | 5-2  |
| Memory Dialing .....                             | 5-2  |
| Entering Alphanumeric Data From the Keypad ..... | 5-3  |
| Using the STORE Function.....                    | 5-4  |
| Using the RECALL Function .....                  | 5-6  |
| Displaying Information .....                     | 5-6  |
| Adding and Changing Information.....             | 5-7  |
| Using the Multiple Transaction Function.....     | 5-7  |
| Using the POST Function .....                    | 5-8  |
| Resetting the Calendar/Clock .....               | 5-9  |
| Changing the System Password.....                | 5-11 |
| Programming Error .....                          | 5-12 |
| Error Condition Recovery .....                   | 5-12 |
| Error Condition Display and Override.....        | 5-13 |
| Re-initialize Memory Procedure.....              | 5-13 |
| Programming Error Override .....                 | 5-13 |

## 6. Terminal Parameters

|  |     |
|--|-----|
| Entering Terminal/Location Parameters..... | 6-2 |
| Download Phone Number .....                | 6-2 |
| Serial Number .....                        | 6-3 |
| Program Date .....                         | 6-3 |
| Message Sequence Number.....               | 6-3 |
| Multiple Transaction Timeout .....         | 6-4 |
| Scroll Length .....                        | 6-4 |
| Terminal Key Beep Flag .....               | 6-4 |
| Dial Type Flag .....                       | 6-5 |
| Dial Speed Flag.....                       | 6-5 |
| Parallel Phone Available Flag .....        | 6-6 |
| Number of Retries .....                    | 6-6 |

# Table of Contents

---

## 6. Terminal Parameters (continued)

|  |      |
|--|------|
| Telephone Line Test Flag .....                         | 6-6  |
| RECALL, Set Clock, Unit-to-Unit Restriction Flag ..... | 6-7  |
| Application ID .....                                   | 6-7  |
| Idle Prompt .....                                      | 6-7  |
| Auto Answer Control String.....                        | 6-7  |
| Memory Dial Phone Numbers .....                        | 6-8  |
| Printer Type.....                                      | 6-8  |
| Printer 200/250 Paper Advance.....                     | 6-8  |
| Generic Printer Baud Rate.....                         | 6-9  |
| Generic Printer Data Format.....                       | 6-9  |
| Generic Printer Handshake.....                         | 6-9  |
| Bell/CCITT Mode.....                                   | 6-10 |
| Dial-Up Line Upload/Download Speed .....               | 6-10 |
| Auto Answer Speed .....                                | 6-10 |
| Auto Answer Processing.....                            | 6-11 |
| Auto Answer Packet Inactivity Timeout .....            | 6-11 |
| PIN Pad/Bar Code Wand Serial Port Function.....        | 6-11 |
| Line Recovery Time .....                               | 6-12 |
| Idle Loop Control String .....                         | 6-12 |
| Host for Card Transactions .....                       | 6-12 |
| Host for Bar Code Transactions .....                   | 6-12 |

## 7. Entering Transaction Parameters

|                                      |     |
|--------------------------------------|-----|
| Transaction Parameters .....         | 7-1 |
| Primary Phone Number.....            | 7-2 |
| Secondary Phone Number.....          | 7-2 |
| Call Center Phone Number.....        | 7-3 |
| Referral Phone Number .....          | 7-3 |
| Merchant Identification Number ..... | 7-4 |
| Transaction Format Flag.....         | 7-4 |
| Fraud Control Flag .....             | 7-5 |
| Transaction Control String .....     | 7-6 |
| Transaction Type Prompt.....         | 7-6 |

# Table of Contents

---

## 7. (continued)

|  |     |
|--|-----|
| Floor Limit.....                       | 7-6 |
| Response Analysis Control String ..... | 7-7 |
| Auxiliary Control String.....          | 7-7 |
| Multiple Transaction Group Code .....  | 7-7 |
| Login Strings .....                    | 7-8 |
| Soft Login .....                       | 7-9 |

## 8. Maintenance and Diagnostics

|  |     |
|--|-----|
| Cleaning .....   | 8-1 |
| Returning the TRANZ 330 Terminal for Service.....        | 8-1 |
| Troubleshooting.....                                     | 8-1 |
| Error Messages .....                                     | 8-1 |
| Display Panel Does Not Display Correct Information ..... | 8-2 |
| Telephone Does Not Work Properly .....                   | 8-2 |
| Printer Does Not Work .....                              | 8-2 |
| Bar Code Wand Does Not Work.....                         | 8-2 |
| PIN Pad Does Not Work.....                               | 8-2 |
| Terminal Transactions do not Work.....                   | 8-3 |
| Keypad does not Respond.....                             | 8-3 |
| TRANZ 330 Diagnostics.....                               | 8-4 |
| TRANZ 330 Memory Test.....                               | 8-4 |
| TRANZ 330 Keypad Test.....                               | 8-4 |
| TRANZ 330 Display Test .....                             | 8-5 |
| TRANZ 330 Display Messages Test.....                     | 8-5 |
| TRANZ 330 Card Reader Test .....                         | 8-6 |
| Resetting the TRANZ330 Calendar/Clock .....              | 8-6 |
| TRANZ 330 Bar Code Wand Test .....                       | 8-6 |
| TRANZ 330 Transaction Simulation .....                   | 8-7 |

## Appendix A. Memory Locations

|  |     |
|--|-----|
| Functional Listing of Memory Locations ..... | A-1 |
| Terminal Parameters .....                    | A-1 |
| Buffers.....                                 | A-1 |

# Table of Contents

---

## Appendix A. (continued)

|  |     |
|--|-----|
| Miscellaneous .....                                  | A-1 |
| Login Strings and Function Key Control Strings ..... | A-2 |
| General Records .....                                | A-2 |
| Idle Loop .....                                      | A-2 |
| Auto Answer .....                                    | A-3 |
| Printer Information .....                            | A-3 |
| Host Parameters .....                                | A-3 |
| Numeric Listing of Memory Locations .....            | A-3 |

## Appendix B. Features and Specifications

|  |     |
|--|-----|
| Microprocessor .....                                   | B-1 |
| Memory .....   | B-1 |
| Cardreader .....                                       | B-1 |
| Display .....  | B-1 |
| Miscellaneous .....                                    | B-1 |
| Communication .....                                    | B-1 |
| Modem .....  | B-1 |
| Restricted Memory Accessibility .....                  | B-2 |
| Multiple Transaction Capability .....                  | B-2 |
| Custom Security and Fraud Control .....                | B-2 |
| User Programmable Password .....                       | B-2 |
| Selection of Transaction Data Formats .....            | B-2 |
| Power Requirements .....                               | B-2 |
| Environmental .....                                    | B-2 |
| Dimensions and Weight .....                            | B-2 |
| RS232 Serial Port 8-Pin DIN Connector .....            | B-3 |
| PIN Pad/Bar Code Serial Port 6-Pin DIN Connector ..... | B-3 |
| Serial Telephone Line (modem) Interface .....          | B-3 |
| Accessories .....                                      | B-4 |
| Direct Download Cable .....                            | B-4 |
| Printers .....   | B-4 |
| Peripheral Devices .....                               | B-4 |
| Programming Languages .....                            | B-4 |
| Reference Manual .....                                 | B-4 |

# Table of Contents

---

## Appendix C. Prompts and Error Messages

## Appendix D. TRANZ 330 (202) Leased Line Terminal

|   |     |
|---|-----|
| Basic Operation.....                      | D-1 |
| Entering Terminal Parameters .....        | D-2 |
| Poll Address.....                         | D-2 |
| Keyboard ID.....                          | D-2 |
| Poll Timeout Period.....                  | D-3 |
| Downloading.....                          | D-3 |
| Tinet Standard Leased Line Download ..... | D-3 |
| Tinet Cluster Leased Line Download .....  | D-4 |
| Host Initiated or Forced Downloads .....  | D-5 |
| Maintenance/Diagnostics .....             | D-5 |
| NAK Counter.....                          | D-5 |
| Tx/Rx Status Display .....                | D-5 |
| Leased Line Integrity Test .....          | D-5 |
| Programming Considerations .....          | D-6 |
| Standard TRANZ 330 .....                  | D-6 |
| Cluster TRANZ 330 .....                   | D-6 |
| Protocol Considerations .....             | D-6 |
| Standard TRANZ 330 (202).....             | D-7 |
| Cluster TRANZ 330 (202).....              | D-7 |
| Error Messages .....                      | D-7 |
| Memory Locations .....                    | D-8 |

## Glossary

## Index